 


Brake components


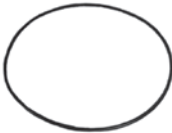 


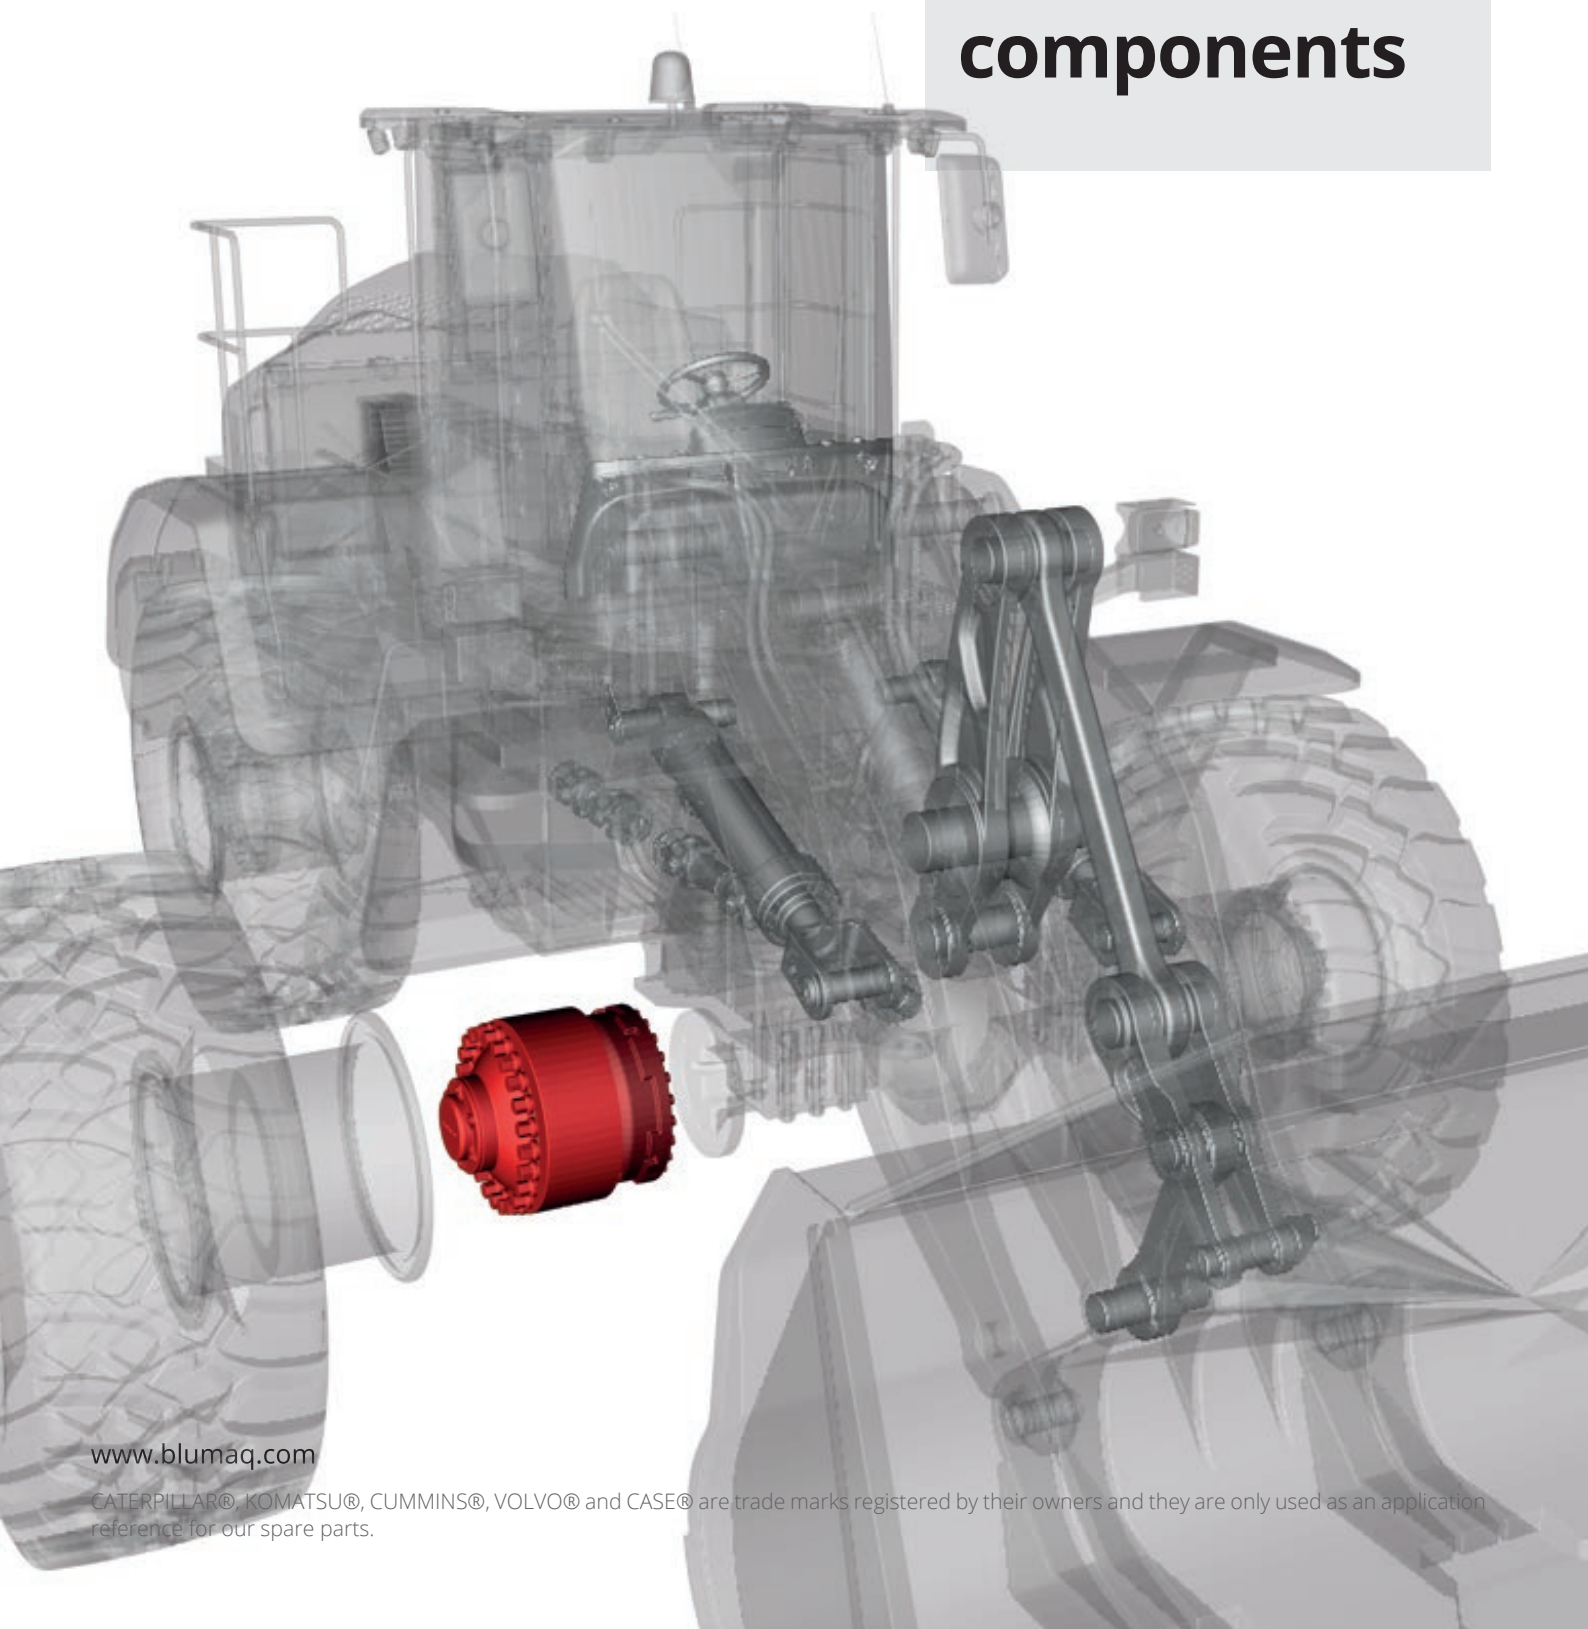





 



www.blumaq.com

CATERPILLAR®, KOMATSU®, CUMMINS®, VOLVO® and CASE® are trade marks registered by their owners and they are only used as an application reference for our spare parts.

Brake components

Blumaq supplies a complete range of spare parts for the repair and maintenance of construction, earthmoving and mining equipment brake systems. We work together with the main European and American brands to offer the latest technology in pneumatic, hydraulic self-adjusting braking systems and double circuit systems with nitrogen accumulators.

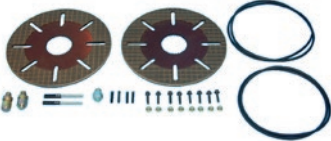			
SEAL	SEAL	BRAKE DISC	BRAKE DISC
			
IMPELLER	SPRING	BRAKE PISTON	BRAKE PISTON
			
BRAKE PLATE	BRAKE PEDAL	BRAKE VALVE	ACCUMULATOR
			
BRAKE DISC KIT	ADJUSTER	COMPRESSOR	MASTER CYLINDER

Blumaq brake system parts use quality materials with a high friction coefficient, capable of absorbing high temperatures and contact pressures in order to achieve a smooth and progressive braking action.

With more than 90,000 references in stock and the most detailed manufacturing specifications report for all our products, Blumaq spare parts for brake systems, mean safety and productivity for your equipment.

Contact our US Regional Sales Reps and locations below:

MEMPHIS / North America West 901 347 3217
blumaqmemphis@blumaq.com

MIAMI / North America East / Americas 844 314 9016
blumaqcorp@blumaq.com



www.blumaq.com